 
 


## Sending a Fax: For more information, see the fx3000 User's Guide

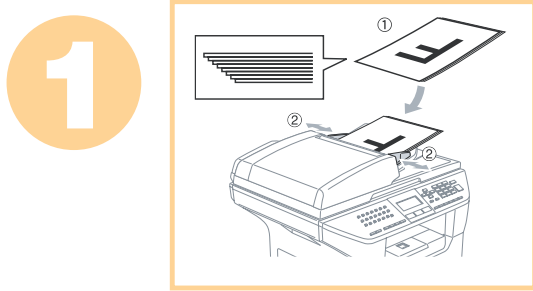

Place your document **face up** in the Document Feeder or **face down** on the Original Glass.

 
If using the document feeder, adjust the original guides to fit your document.

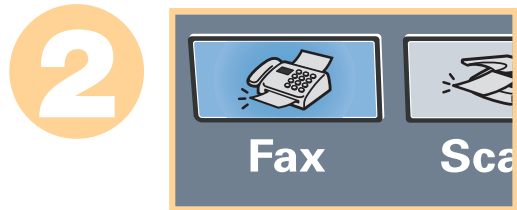

Press **Fax** to enter the fax mode.




Dial the remote fax number using the **10-Key Pad**.

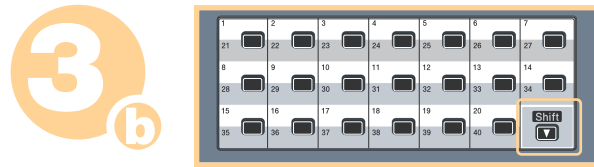

For One-Touch dialing, press the One-Touch key that stores the number you want to dial\*. Hold down **Shift** when selecting numbers 21 to 40.



 
Press **OK** to enter additional destinations.

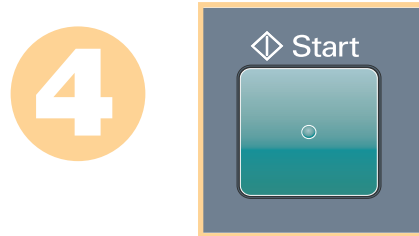

Press the **Start** button on the control panel to send the fax.

\*Programmed by your System Administrator

## Basic Copying: For more information, see the User's Guide

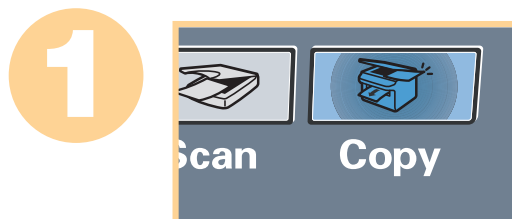 

Load originals as shown above.

Press the **Copy** key.



Enter the number of copies using the **10-Key Pad**.

**3 Select Copy Options:**

 
**Duplex:** For 2-sided copies or originals  
**Contrast/Quality:** Select *Auto*, *Text* or *Photo*  
**Reduce/Enlarge:** Change the copy size ratio  
**Tray Select:** Change the paper tray  
**Sort:** Copy pages will be stacked in order: 1,2,3 1,2,3 (Sort mode requires document feeder)  
**N in 1:** To copy 2 or 4 pages onto one

Use the arrow keys to make settings. Press **OK** to confirm.




Press the **Start** button on the control panel to send the fax.

## Scan to E-Mail: (Network Scan - E-Mail Server Mode) See the Software User's Guide for more scanning options.

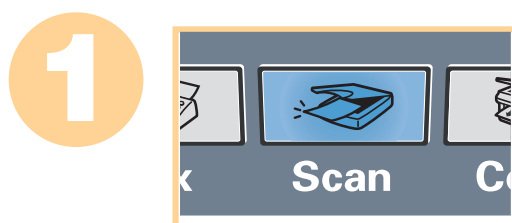

 Load originals as shown above. Press the **Scan** key.

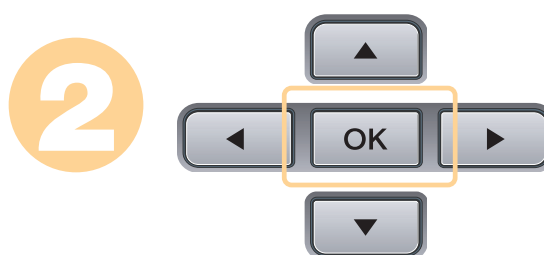

- Use the arrow keys to choose **Scan to E-mail**. Press **OK** to confirm.
- Select original type: 2-sided/1-sided, etc. Press **OK** to confirm.
- Select **E-mail Server**. Press **OK** to confirm.

 


Use the One-Touch keys to enter the pre-programmed E-mail address\*.

Or... Enter the address using the **10-Key Pad**.

Press **OK** to enter additional destinations.

\*Programmed by your System Administrator

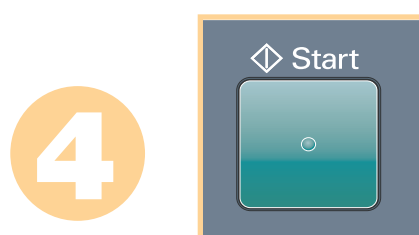

Press the **Start** button on the control panel to send.

**!** At the **"Enter Address"** prompt, press **OK**. Or... select **"Change Quality"** to change default settings.